


NOTE: THE OBJECT OF INSTALLING TWO METER BOXES IS TO BE ABLE TO OPERATE THE THE BLOW OFF WITHOUT SPRAYING WATER ALL OVER YOURSELF. INSTALL THE BLOW OFF WITH THIS THOUGHT IN MIND. BACKFILL EXCAVATION AROUND THE VALVE BOX AND METER BOX WITH 2 INCH DIAMETER GRADED STONE. SLOPE TO DRAIN AWAY FROM METER BOX AND OPERATING VALVE.

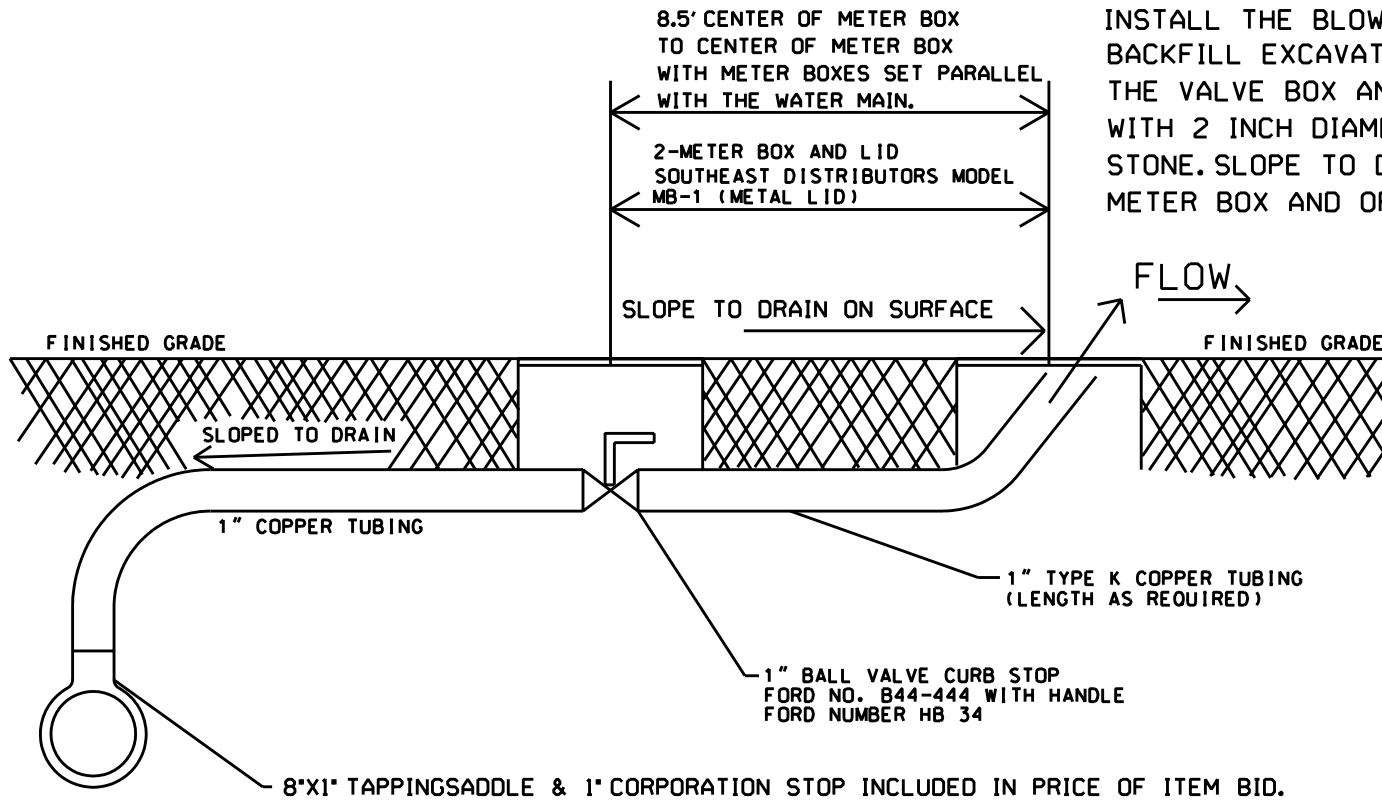

MANUAL BLOW-OFF STATION
SIDE VIEW

CU CONSTRUCTION
DETAIL #200-86

CU CONSTRUCTION
DETAIL #200-86